


REMKO STANDPIPE ASSEMBLY

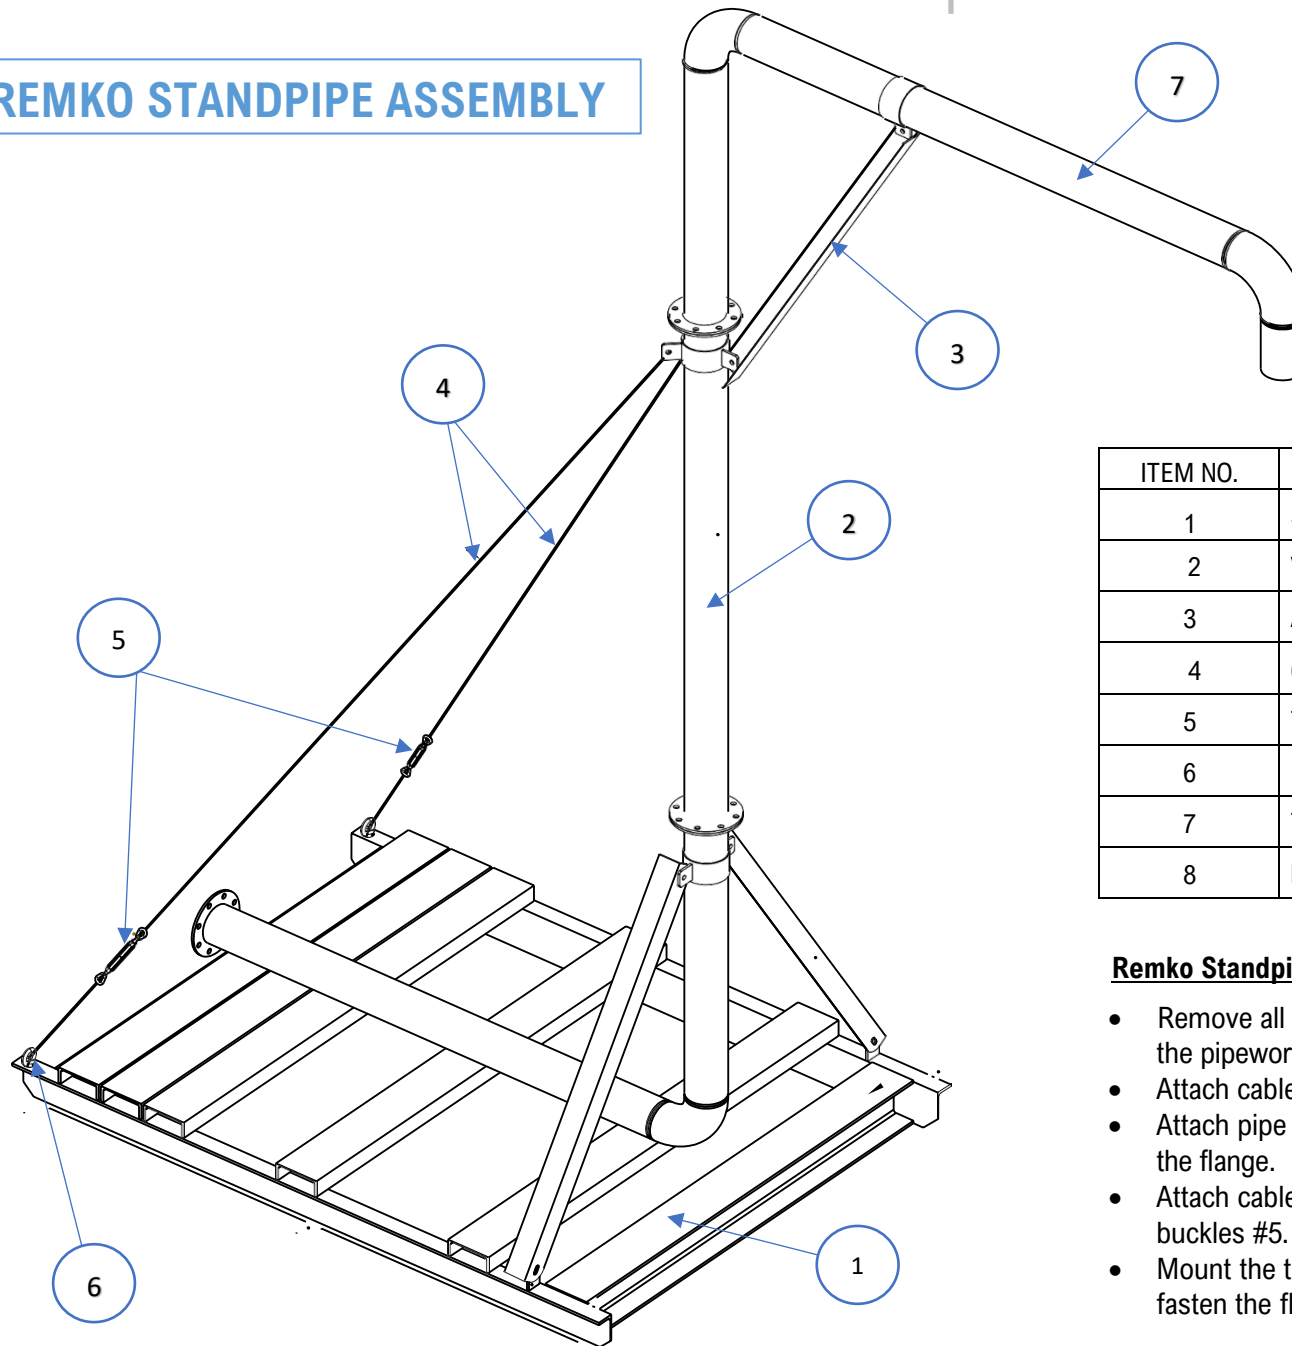

ITEM NO.	PART NUMBER	QTY.
1	Standpipe Base Assy	1
2	Vertical Pipe Assembly	1
3	Angle Brace	2
4	6mm Cable Wire	2
5	Turn Buckle	2
6	Eye Bolt	2
7	Top Pipe Assembly	1
8	Lug	

Remko Standpipe Assembly Instructions:

- Remove all the equipment from the standpipe base other than the pipework.
- Attach cable wires #4 to pipe assembly #2.
- Attach pipe assembly #2 to base pipework as shown and fasten the flange.
- Attach cable wires #4 to base as shown and tighten the turn buckles #5.
- Mount the top pipe assembly over the pipe assembly #2 and fasten the flange and brace angles # 3